

FLEX WAND ASSEMBLY



The Flexible Wand may be bent into almost any position to clean hard to reach surfaces and A/C Coils. The trigger gun quick couples to a pressure hose for easy exchange of the regular pressure washer wand assembly to the flex wand.

NOTE: You may need to purchase a quick disconnect to fit your existing trigger gun and pressure hose, if not so equipped. Maxi-Vac Quick Disconnect (part # 5020) is recommended.

CAUTION: These wands are designed for use with specific Maxi-Vac Coil Scrubbers and pressure washers. If your pressure washer does not match one of the models shown below, the Flex Wand should not be used.

Flex Wand Model	For Use with Maxi-Vac Model
FW250	CS250, JS400, P1100, JS650
FW700	JS700i only

Operating Pressures

When used with certain Maxi-Vac pressure washers, the operating pressure is lower than when you are using the standard wand/nozzle furnished with the unit. This is designed into the Flex Wand to make the pressure more compatible with, and safe for the task of cleaning A/C Coils. Pressure from various Maxi-Vac machines with the Flex Wand is as follows:

Wand Model	Pressure Washer Model	Pressure Generated
FW250	CS250	250 PSI
FW250	JS400	400 PSI
FW250	JS650	500 PSI
FW250	P1100	600 PSI
FW700	JS700i only	400 PSI